



INCLUDED PARTS

BOX ONE: LC-HRC-(color code)

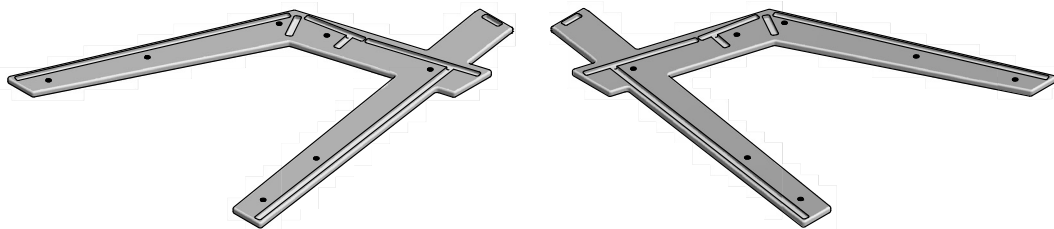

P1L
1x


P1R
1x

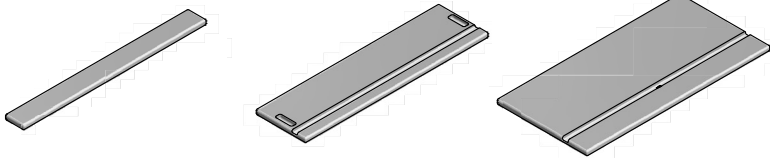

P2
1x

P3
1x


P4
1x

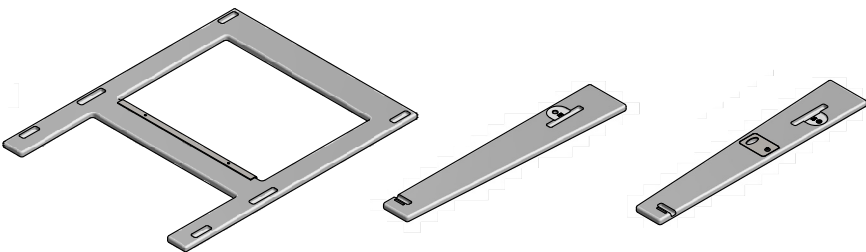

P5
1x

P6L
1x


P6R
1x

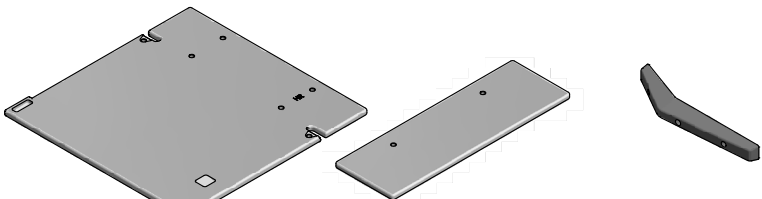

P7
1x

P8
1x

P9
2x

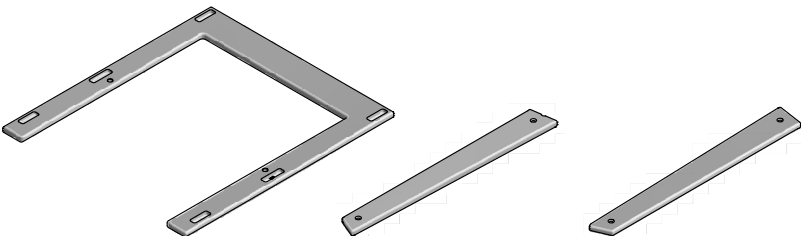

P10
1x

P11L
1x


P11R
1x



P12
1x

GB
12x

MB
2x

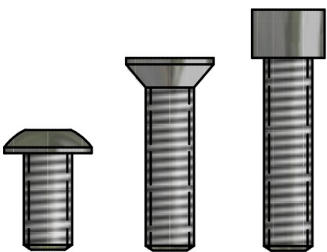

1/2"
2x

1"
18x

1"
6x


*Bolt shown
actual size.

ASSEMBLY TIPS: 5 Important Points You **NEED** to Read

1. Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has occurred, please take photos and go to lollidesigns.com/damage. Rest assured we'll get it taken care of straight away!
2. To avoid scratching furniture, assemble on a clean, soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.
3. **Start all bolts by hand to ensure proper alignment and to prevent cross threading.** Then using the provided tool, tighten until you feel resistance. Do not overtighten.
4. Bolts should not be forced, but some components, particularly blocks, fit snug but can still be installed without tools or excess force.
5. If parts are still not going together, please send us a photo of the part you are having trouble with.

BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks as shown below.

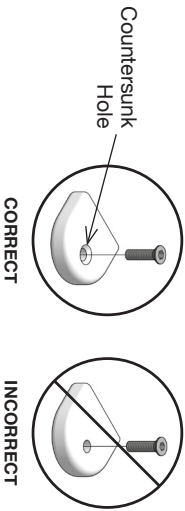

CORRECT

INCORRECT

♻️ RECYCLE THE PACKAGING

We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Loll Designs and Planet Earth thank you!

WE WANT YOU TO LOVE YOUR LOLL

For more info and visual aids, watch the assembly videos at www.lollidesigns.com/videos
For product care & maintenance, visit www.lollidesigns.com/care-maintenance
For further lollygagging assistance, please reach out!

+1 877-740-3387
sales@lollidesigns.com

5912 Waseca Street
Duluth, Minnesota 55807

"*Loll Designs inspires people to appreciate the outdoors.*"

Greg Benson - Founder


ASSEMBLY INSTRUCTIONS & PRODUCT INFO:

HI-RISE CHAIR WITH BRIDGE
HI-RISE CHAIR WITH BRIDGE 40




INCLUDED PARTS CONTINUED


BOX TWO: LC-HRCB-(color code)

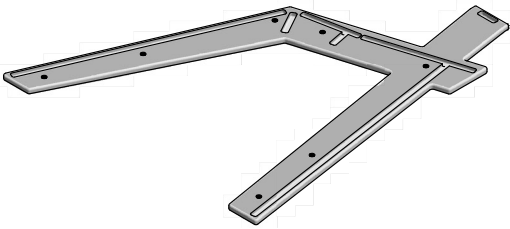


P1L
1x

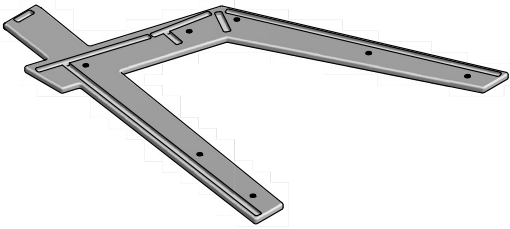


P1R
1x

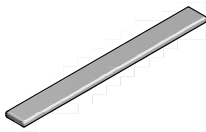


P2
1x

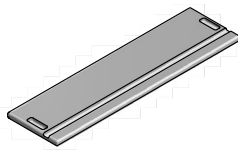


P3
1x

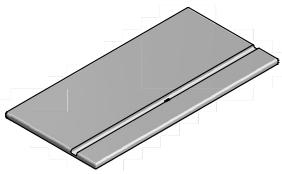


P4
1x

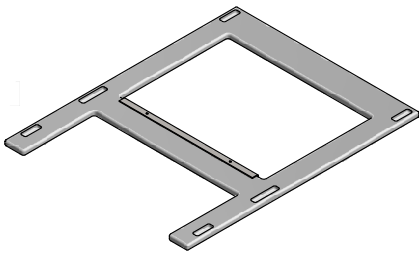

P5
1x

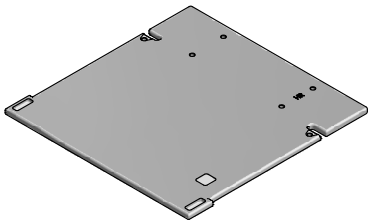


P7
1x

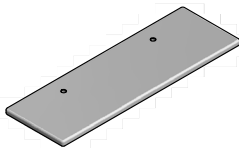


P8
1x




P9
2x

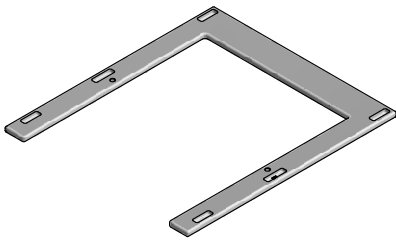


P10
1x

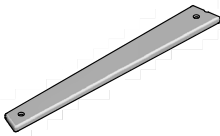

P11L
1x

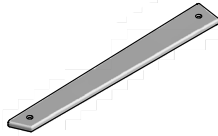

P11R
1x




P12
1x




GB
12x




MB
2x

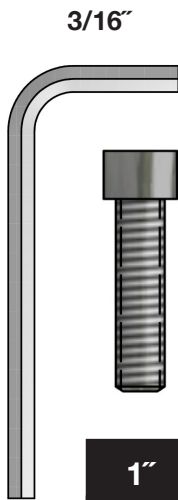

3/16"
1"
6x

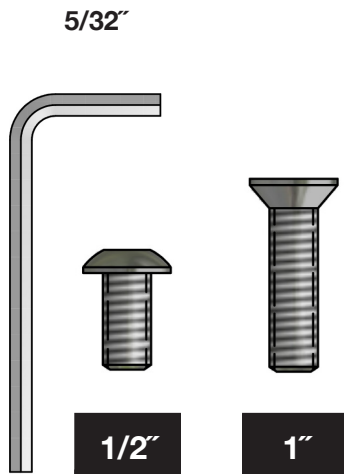

5/32"
1"
2x




1"
18x

*Bolts shown actual size.


** Please use included 3/16" Allen Wrench for step 7 only.

BOX TWO BRIDGE: LC-HRCB-(color code)


BOX TWO BRIDGE 40: LC-HRCB40-(color code)

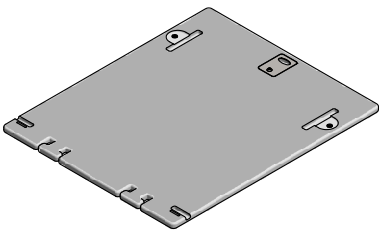


P14
1x

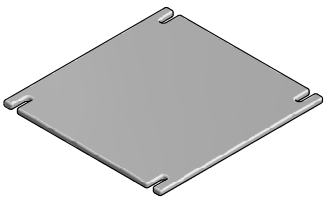

P15
1x

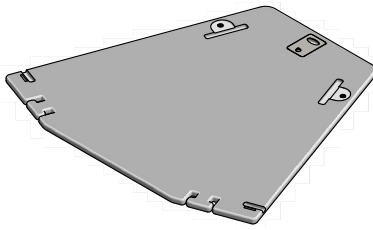



P14
1x

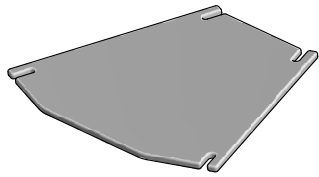



P15
1x

1



Follow steps 1-8 on BOX TWO in conjunction.

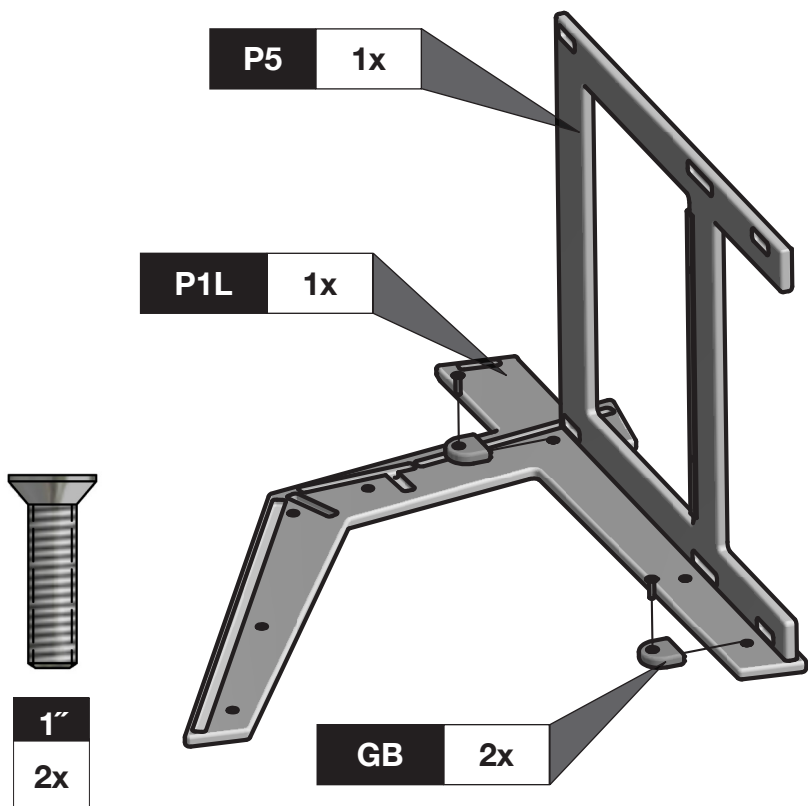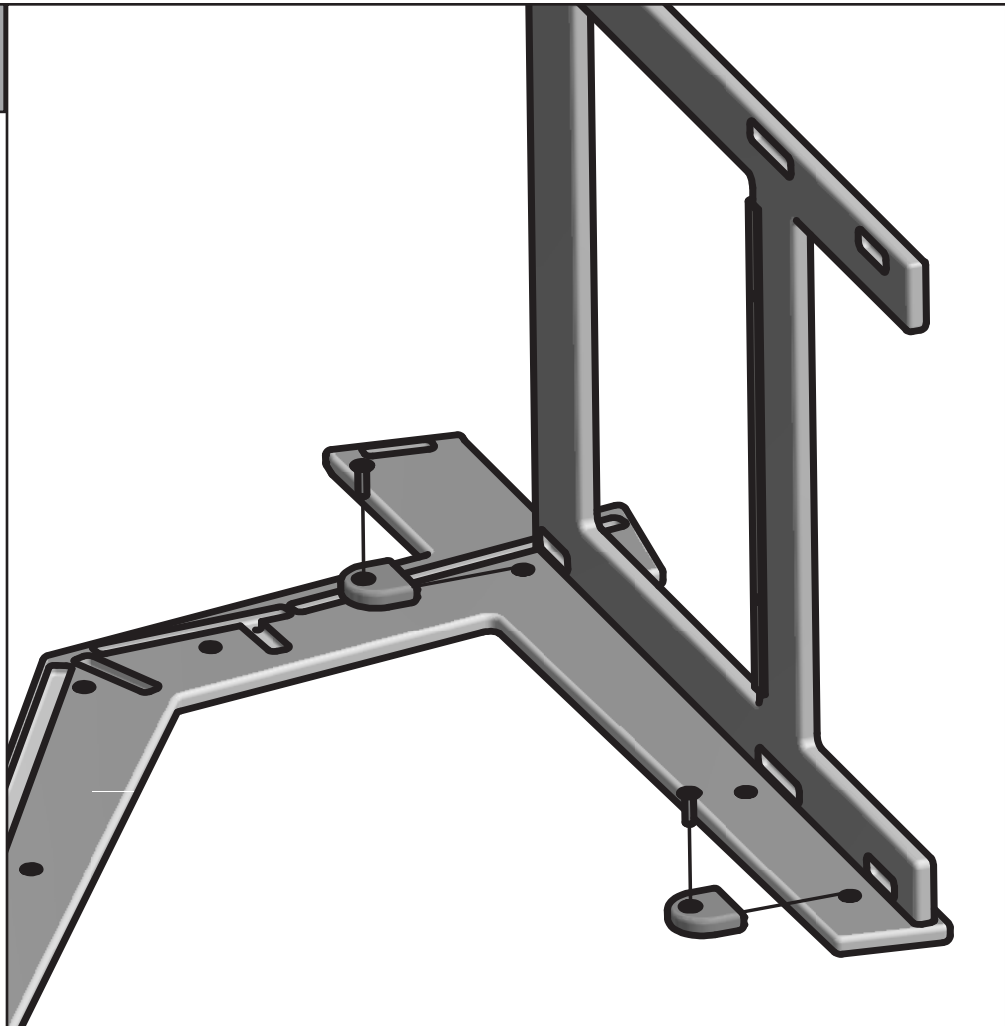

2

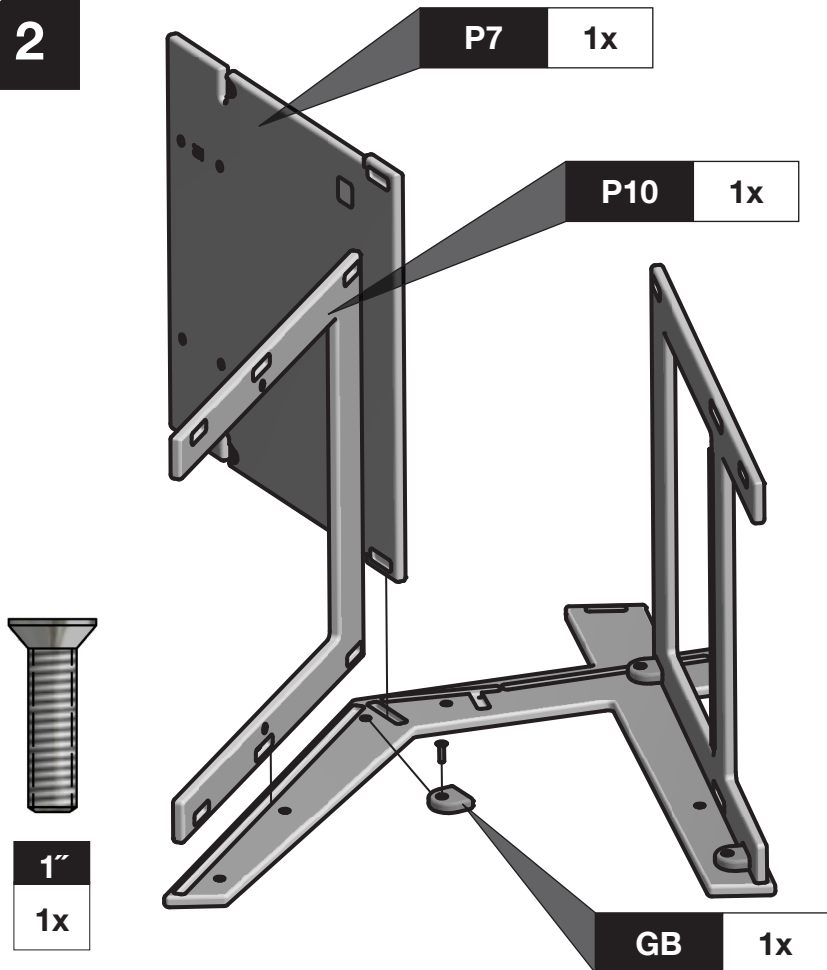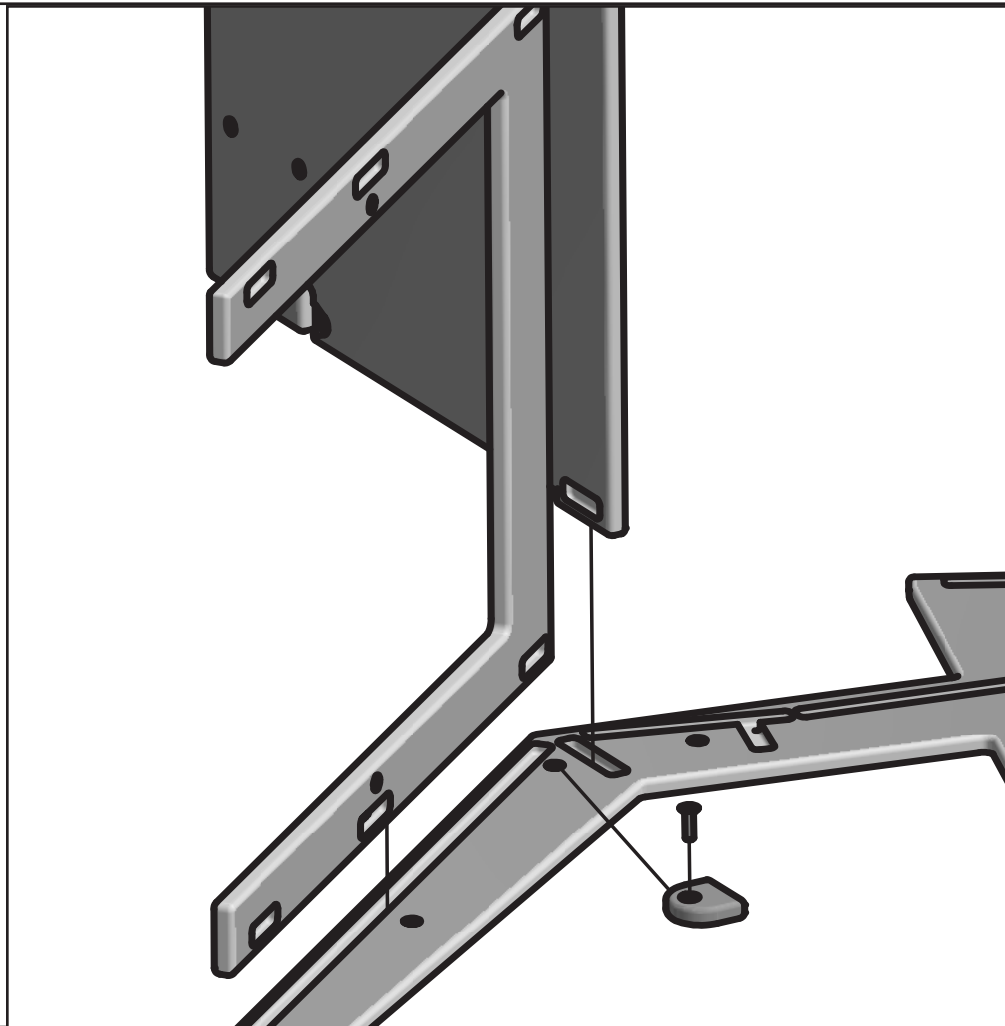

3

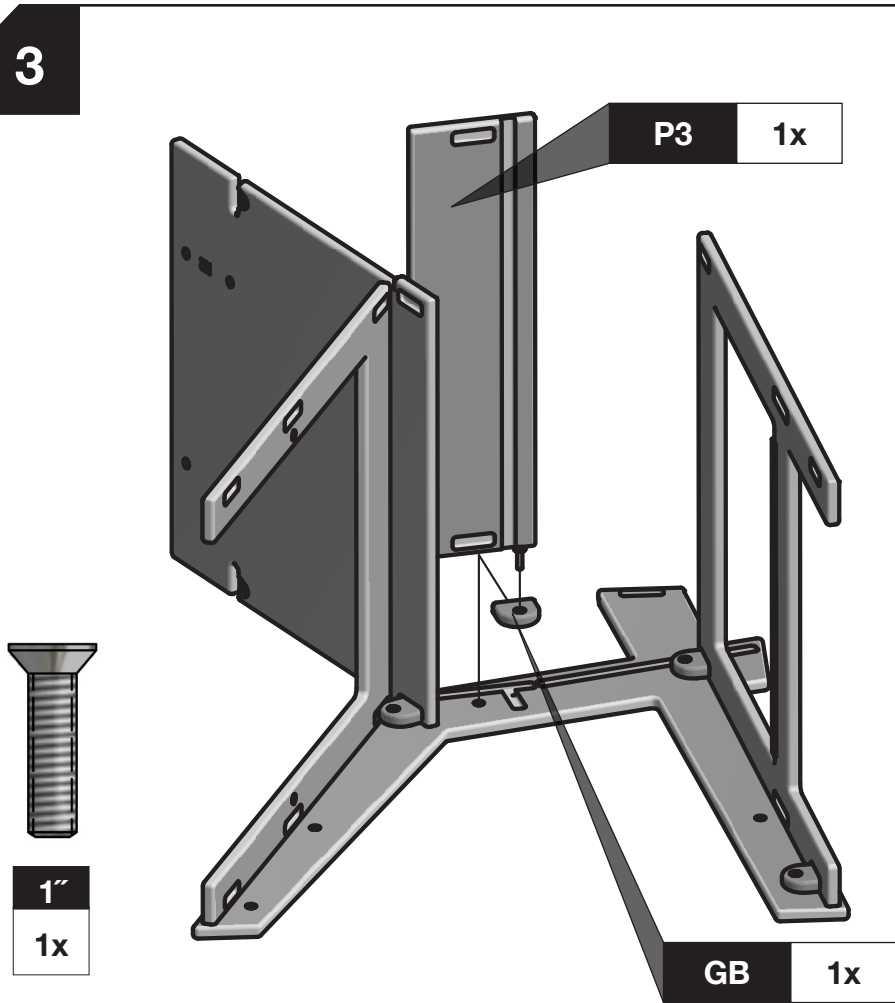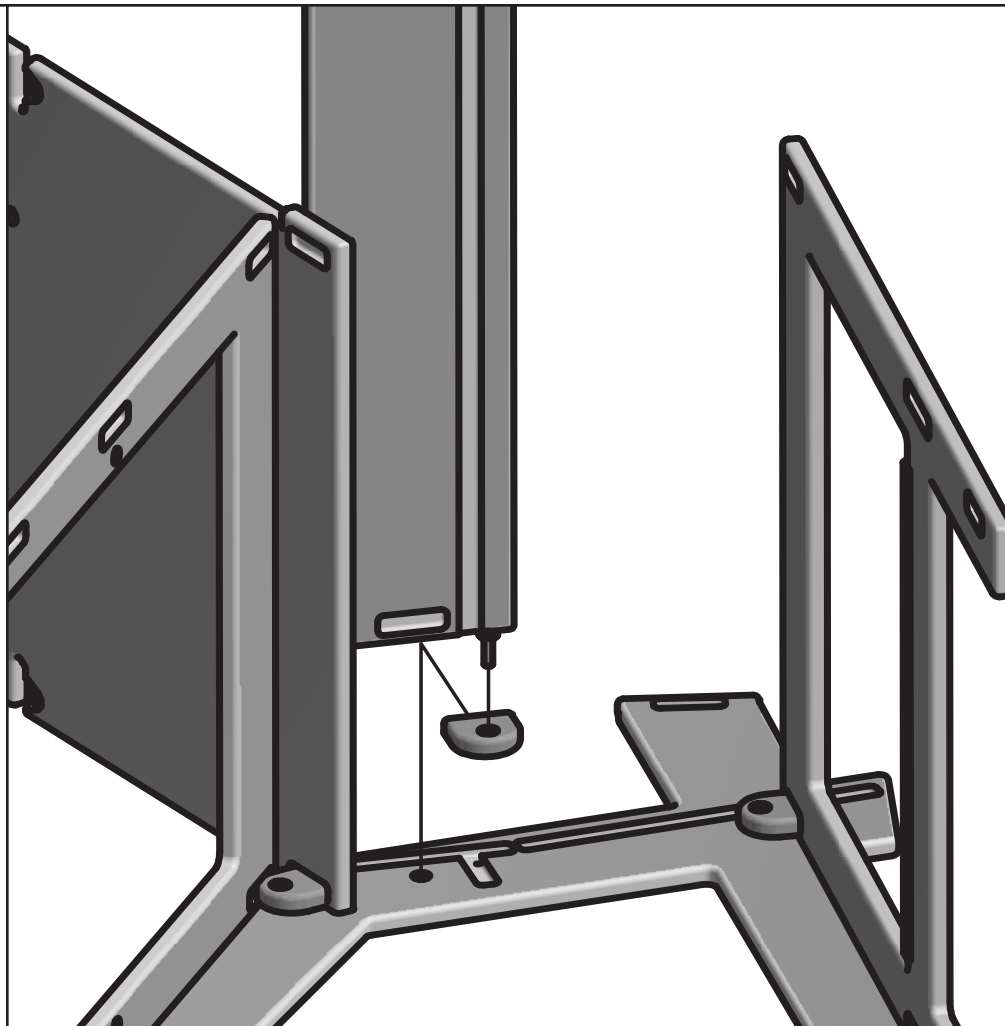

4

P2

1x

P4

1x

GB

4x

1"

4x

5

P9

2x

1"

6x

***Caution:**

Tighten bolts until parts are drawn tight together and stop.
Do not overtighten bolts.

**** Please use included 3/16" Allen Wrench for step 7.**

6

Repeat steps 1-7 for BOX TWO before continuing.



BOX TWO

P14



1x

***Bridge 40 not shown**



7

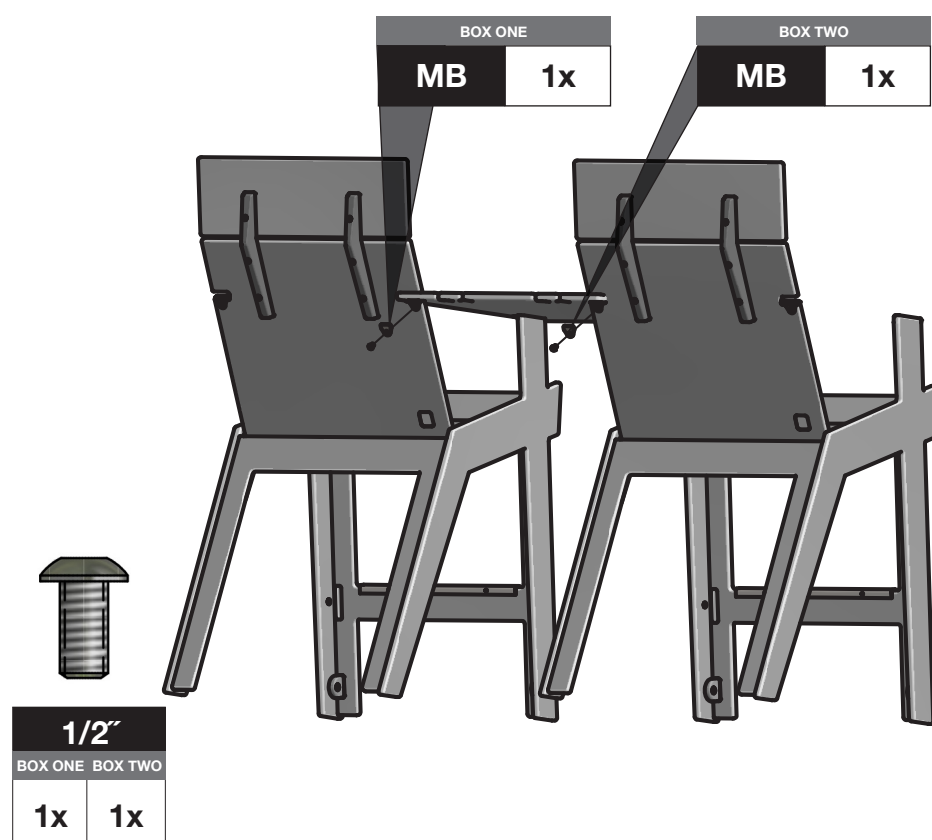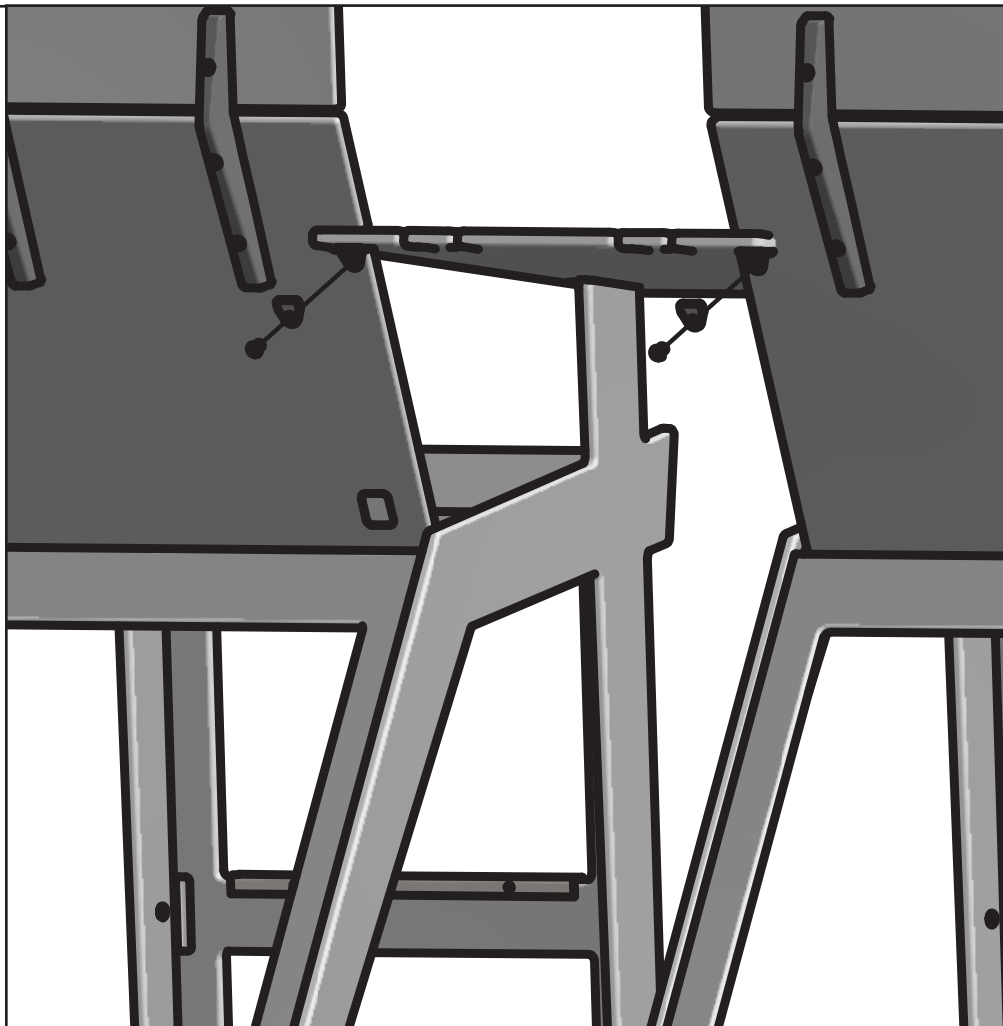


8

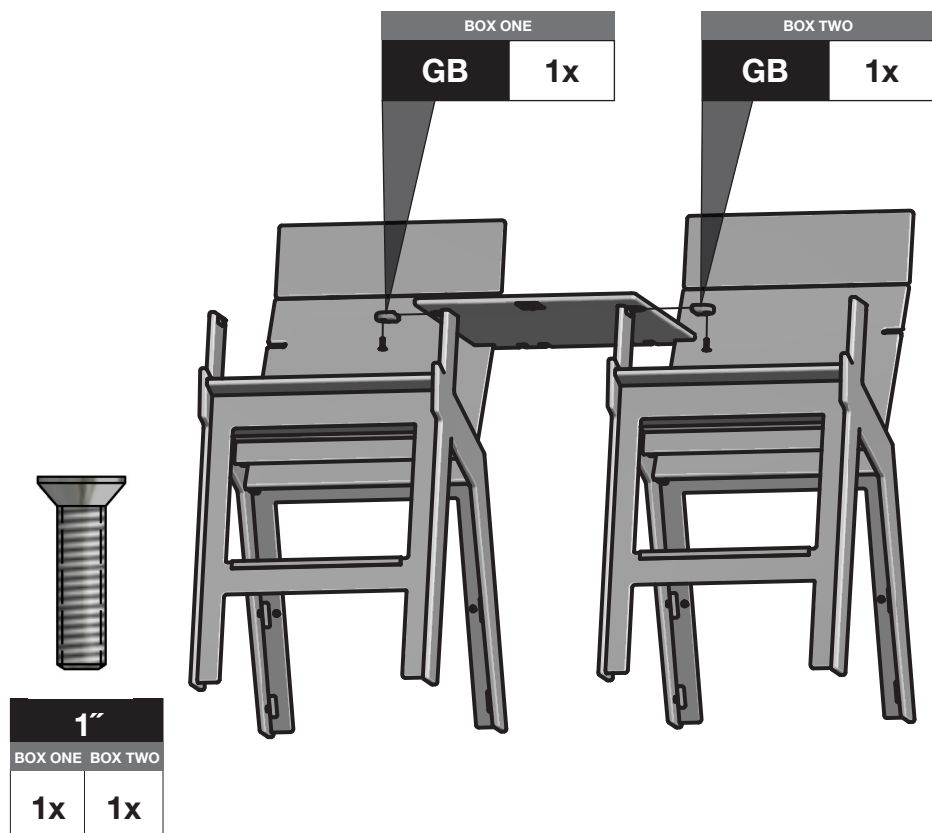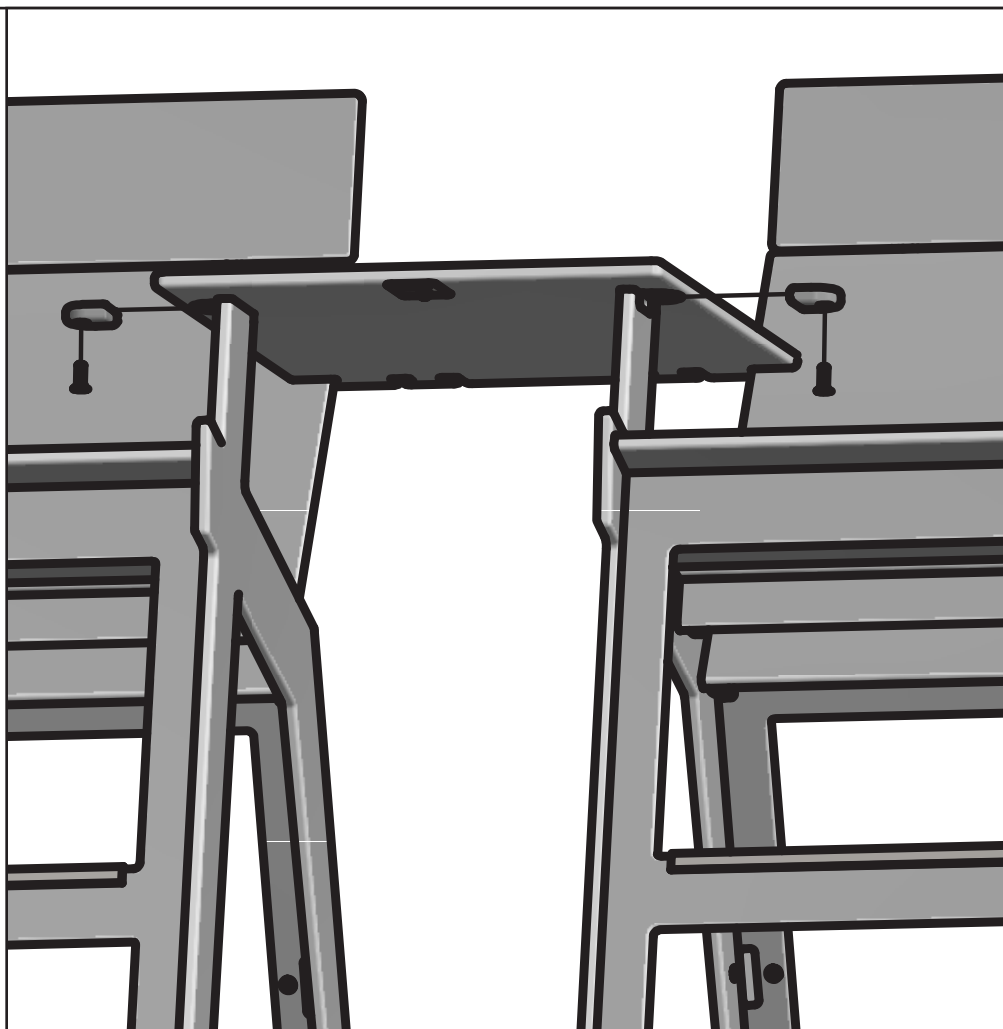


9

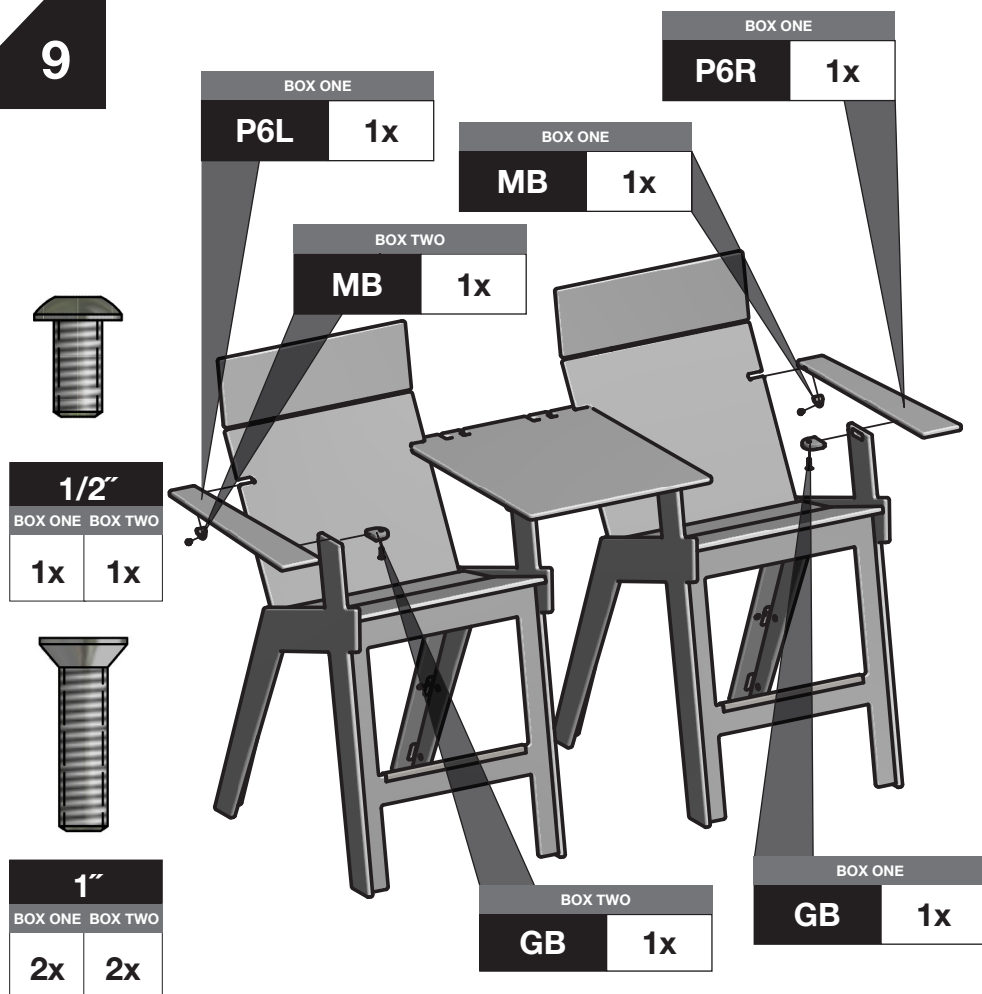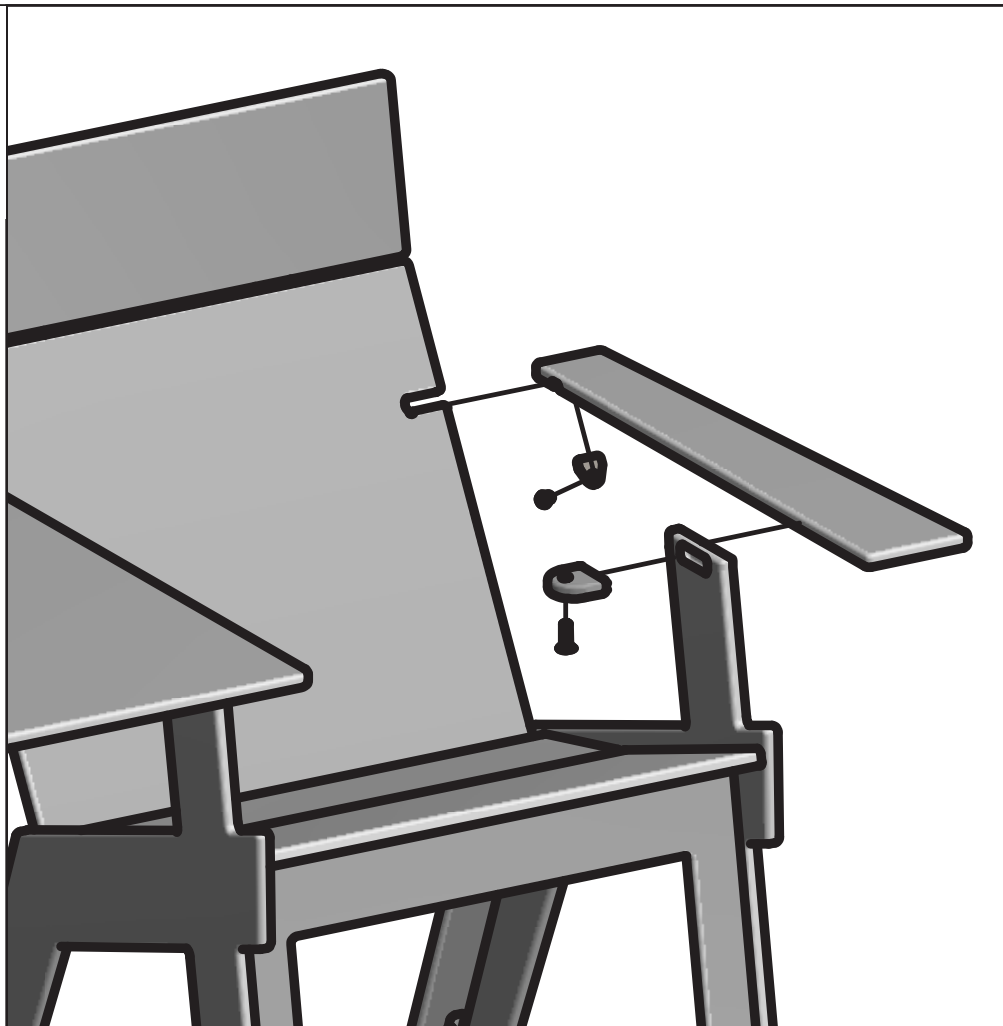

10

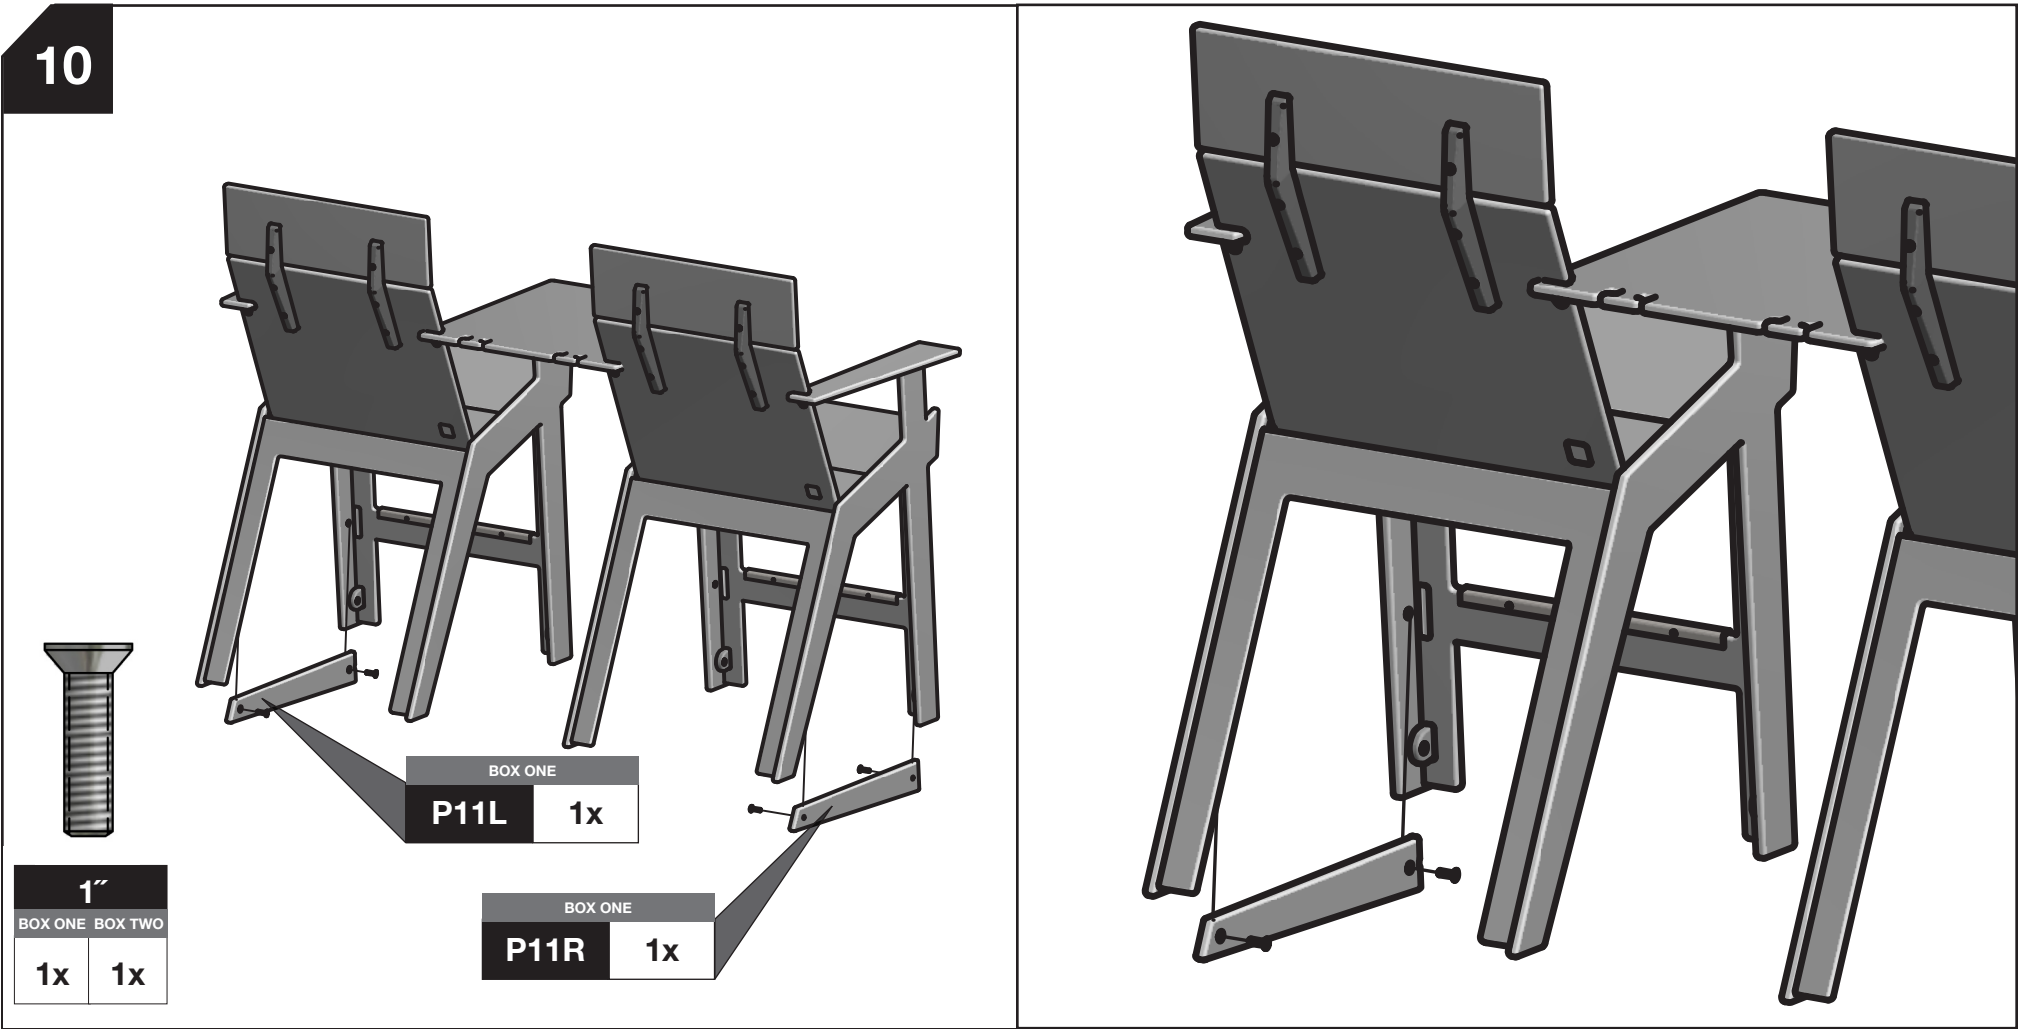

11

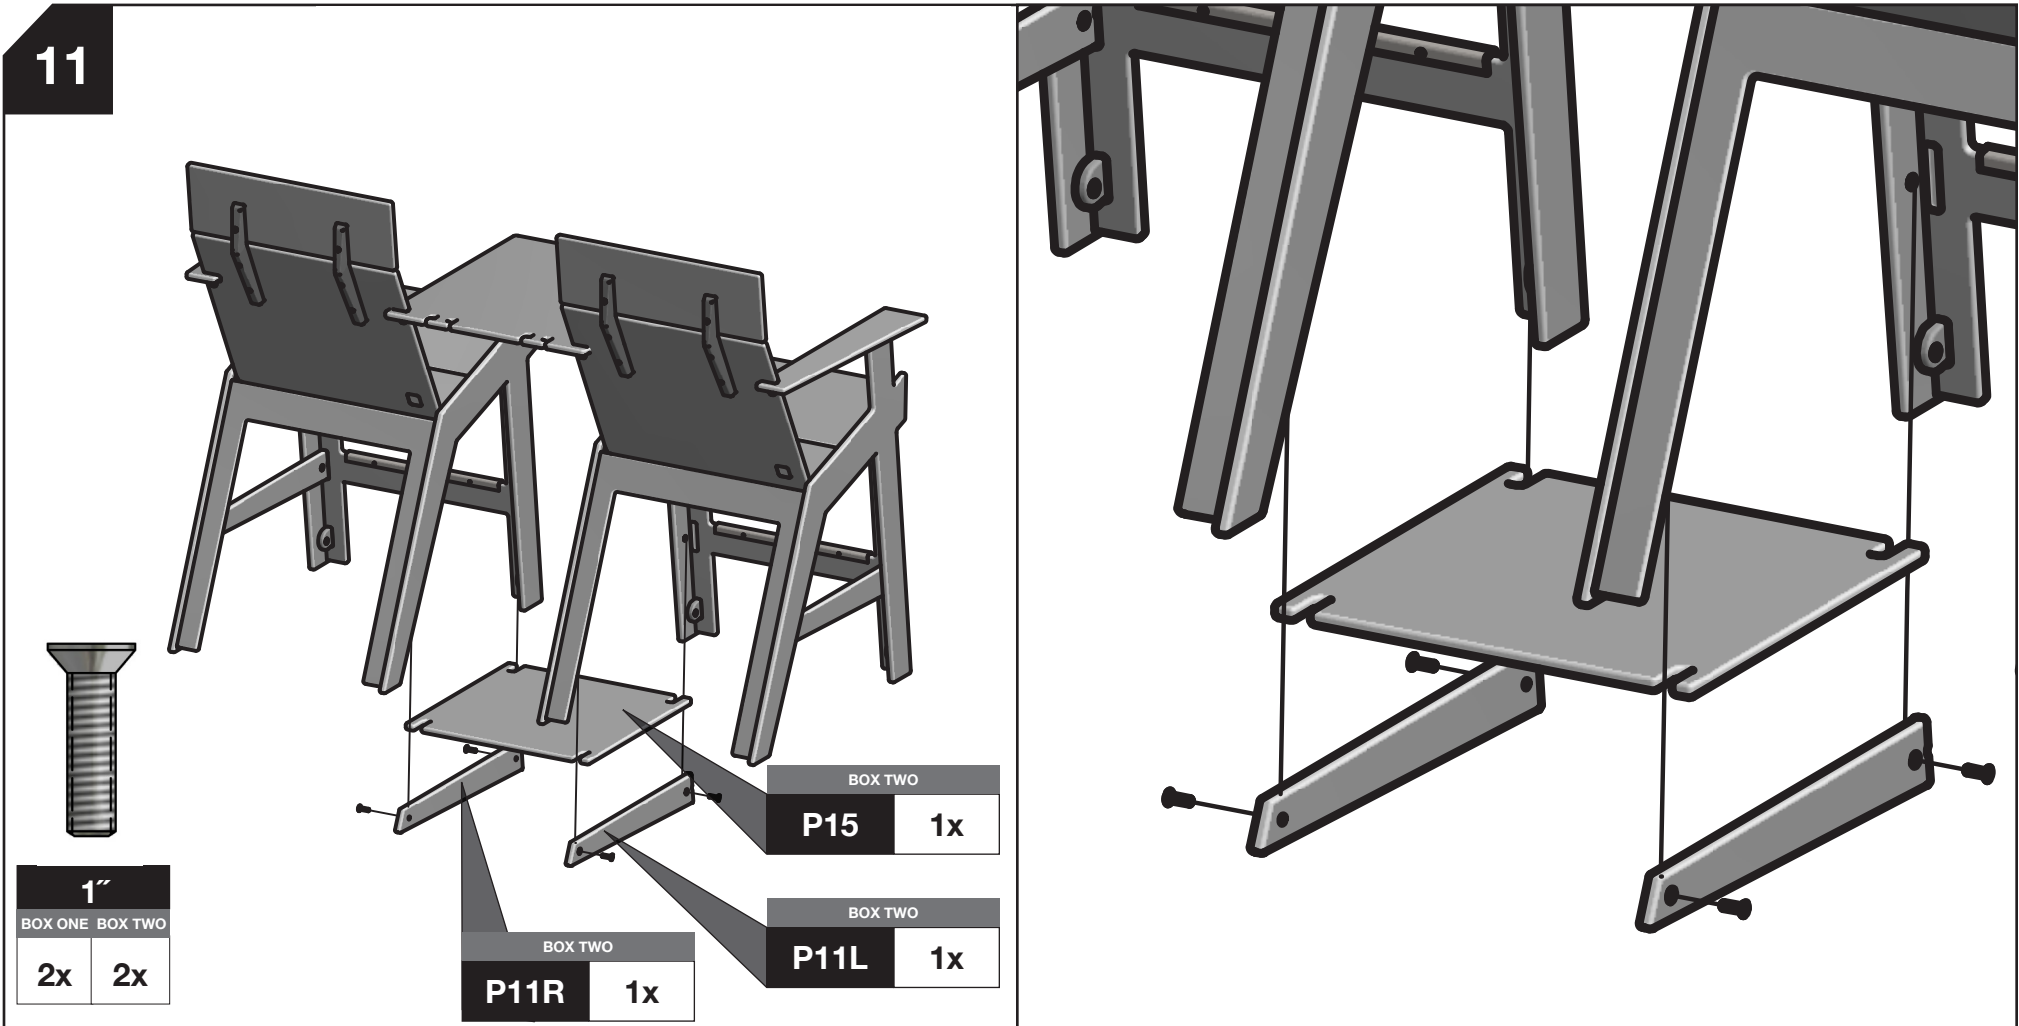

12

